


# VisiBall<sup>®</sup>

## Installation Instructions.

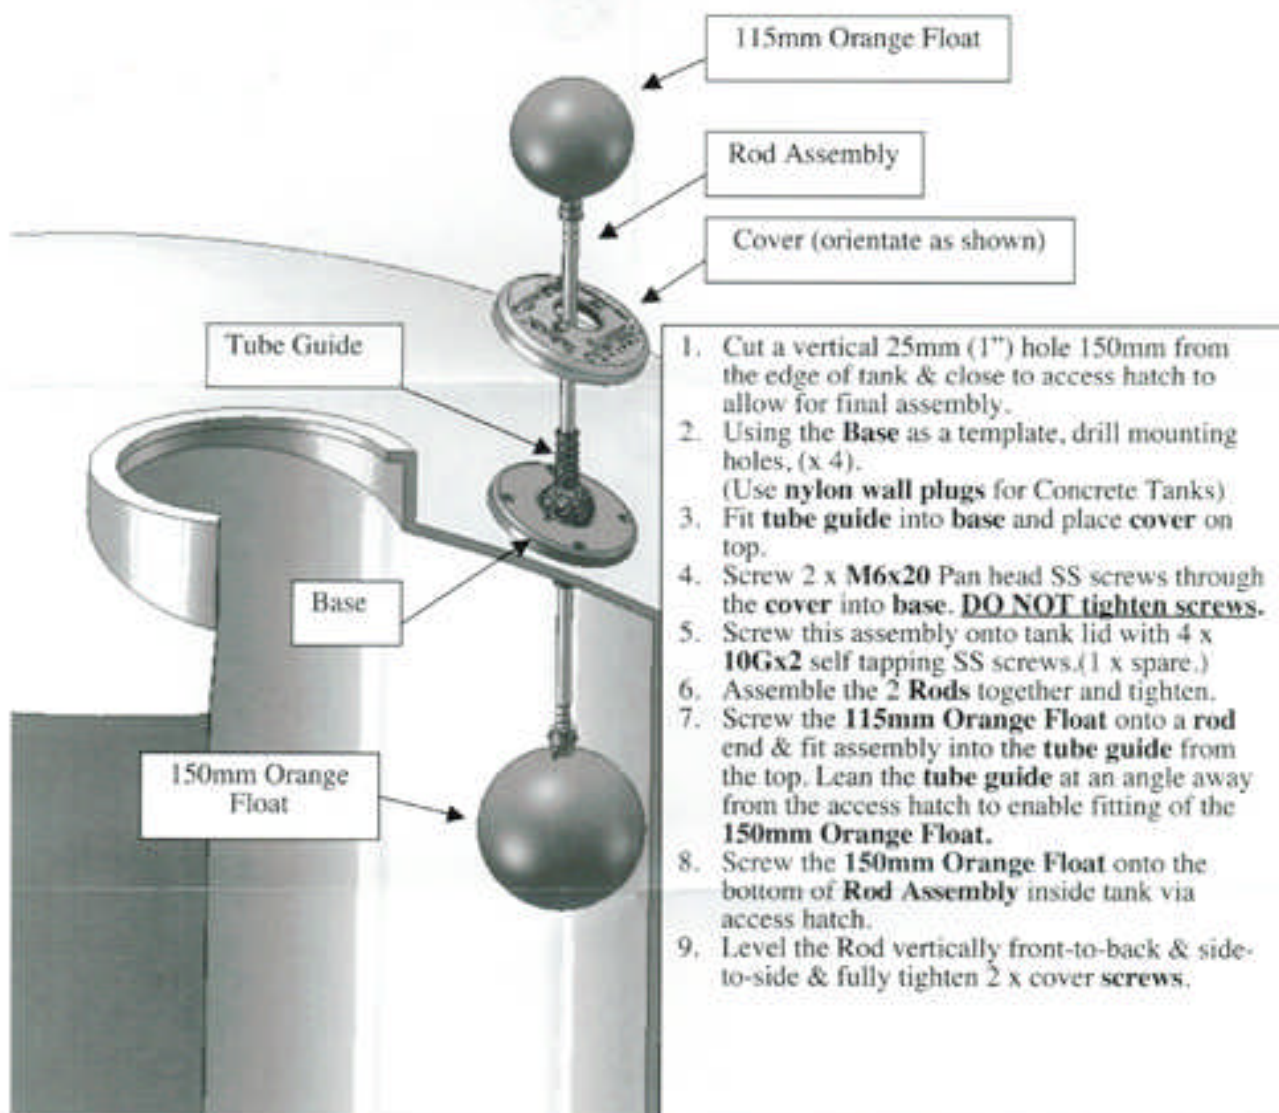

**Tools Required:** 2 x 150mm (6") adjustable spanners, 25mm  $\phi$  (1") Hole saw or drill, 3.5 $\phi$  (1/8") Drill Bit, 8.0 $\phi$  (5/16" & 1" Masonry drills - concrete only), # 2 Philips screw driver & spirit level.