



1 Remove Lid from water butt by gently prising off the 4x8mm arrow clips.

2 Position Water butt in required position and use pre-drilled hole for your Rainsaver connector. The pre-drilled hole not used can be sealed with rubber bung supplied. Push Rainsaver connector through the washer from the inside, then fit and tighten the nut on the outside to form a seal.

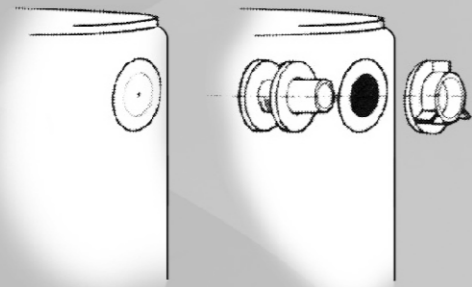

3 Position water butt with tap facing forward adjacent to downpipe. Place water butt on stand provided. A 30mm section now needs to be removed from the downpipe. Mark the downpipe 10mm below the top of the water butt. Mark again 30mm below this point. Using a hacksaw cut out this section.

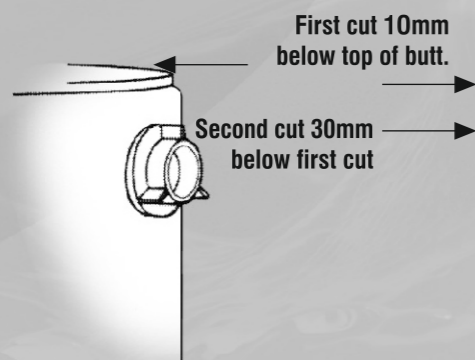


It will be helpful to release any clips supporting the downpipe, in order to insert the Rainsaver body, but these should be re-fitted on completion.

EASY TO ASSEMBLE!

Fits standard 68mm round and 65mm square plastic downpipes

4 Fit Rainsaver body with square end upright into the cut section of the downpipe

Connect hose between Rainsaver body and Water butt connector.

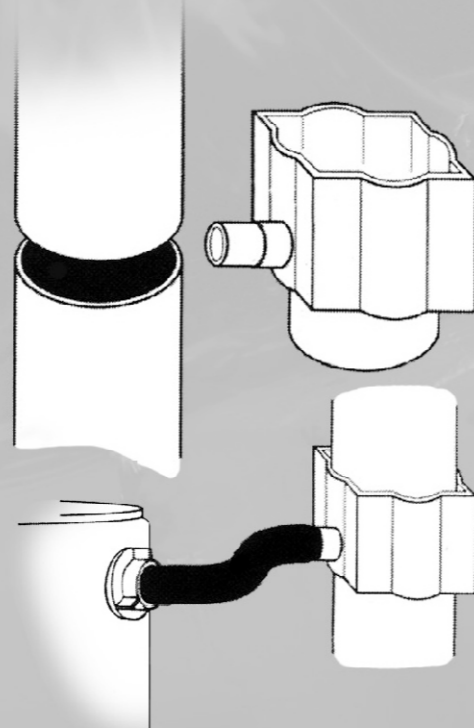

fitting instructions

 **Polytank Group Limited**
engineering in plastic

Polytank Group Limited, Naze Lane East, Freckleton, Preston, Lancs. PR4 1UN


Telephone 01772 632850

Facsimile 01772 679615 www.polytank.co.uk sales@polytank.co.uk

Due to the company's policy of continuous improvement, we reserve the right to change specifications and pricing without notice

Polygroup is the trading name of Polytank Group Limited

 Poleyisure

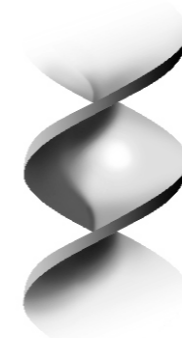

Polytank Group Limited
engineering in plastic



1

Place the product upright on a flat surface. Open the top of the box or netting and remove Polybutt and base.



2

Remove the lid of the Polybutt unit. The lid of the Polybutt unit is easily removed by pulling out the 4 arrow clips around the rim of the unit. Remove the Rain Saver and Polybutt tap and place to one side.



3

Line the Polybutt tap up with the outlet hole at the bottom of the Polybutt unit. The 150ltr Rattan has 2 tap positions. Plug the hole not required with screwed plug provided. (If backnut supplied with tap please fit)



4

Screw the Polybutt tap, clockwise, into the outlet hole. When the tap is fully secured the 'off' valve should be positioned at the top with the outlet of the tap pointing downwards.



5

Lift the main body of the Polybutt unit onto the base unit.



6

Assemble the Rain Saver (See separate fitting instructions on reverse)



7

Pick up the lid and position the arrow clips above the holes on the rim of the unit, and press the arrow clips firmly into the holes.



8

Fitting complete.

waterbutt fitting instructions